

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B1550DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=".5"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1550HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.3"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=".5"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1550HSDB

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.3"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.6"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1700DT <=50558

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="11.6"/> 70000-20002 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B1700DT >=50559

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="11.6"/> 70000-20002 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1700HSD <=72572

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1700HSD >=72573

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1700HSDB <=72572

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-20000 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B1700HSDB >=72573

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-20000 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1750DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1750HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.3"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B1750HSDB

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.3"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.6"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B20

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="30.6"/> 70000-20005 1	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="2.2"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> 32701-37950 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B21

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="29"/> 70000-20005 1	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2100DT <=50571

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="11.6"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> HH670-37710 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2100DT >=50572

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="11.6"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> HH670-37710 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B2100HSD <=72212

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2100HSD >=72213

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2100HSDB <=72212

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-20001 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2100HSDB >=72213

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-20001 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B2150DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15741-11080 1	<u>Engine Oil</u> <input type="text" value="4.4"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.2"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 38430-37710 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2150HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15741-11080 1	<u>Engine Oil</u> <input type="text" value="4.4"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.2"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 32701-37950 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2150HSDB

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15741-11080 1	<u>Engine Oil</u> <input type="text" value="4.4"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.1"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 32701-37950 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2320DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="14.8"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B2320HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16.0"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2400HSD <=73460

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2400HSD >=73461

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2400HSDB <=73460

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-20000 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B2400HSDB >=73461

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-20000 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2410HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="13.2"/> 70000-40202 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2410HSDB

Notes:

4wd Hydro Trans w/bi-speed

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="13.2"/> 70000-40202 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2410HSE

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="13.2"/> 70000-40202 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B26 TLB

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="27.6"/> 70000-40205 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-40200 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2620HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2630HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16.0"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2650HSDC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="4.2"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> T0270-72070 1	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B2710HSD <=15496

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="15.32"/> 70000-40202 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 6	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2710HSD >=50101

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="15.32"/> 70000-40202 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 6	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2910HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="15.32"/> 70000-40202 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 6	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B2920HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B3000HSDC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16"/> 70000-40201 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="5"/> 70000-40200 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B3030HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16.0"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B3200

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="5.7"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="15.3"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-40200 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 6C360-58240 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B3300SUHSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="5.7"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="15.3"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="4.7"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 6C360-58240 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B3350HSDC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 1G319-11210 1	<u>Engine Oil</u> <input type="text" value="5.1"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="5"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> K7591-82360 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> T0270-72070 1	<u>CVT Air Filter</u> NOT USED 0						

B4200DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="2.4"/> 70000-10000 3	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="9"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value=".5"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B5100DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="2.4"/> 70000-10000 3	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="9"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=".53"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B5100E

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="2.4"/> 70000-10000 3	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="9"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B5200DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=".5"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> 66021-36390 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B6100DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.2"/> 70000-20001 3	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value=".53"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B6100E

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.2"/> 70000-20001 3	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B6100HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.4"/> 70000-20001 4	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=".5"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B6100HSE

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.4"/> 70000-20001 4	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B6200DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value=".5"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B6200E

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B6200HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.3"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=".5"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B6200HSE

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7100DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.2"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value=".75"/> 70000-10500 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".15"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7100E

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.2"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7100HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.4"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 5	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B7100HSE

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.4"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 5	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7200DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7200E

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.7"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7200HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.3"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B7200HSE

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="14.3"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7300HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.5"/> 70000-10000 3	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="12.68"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.9"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7400HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.5"/> 70000-10000 3	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="11.84"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7410DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.5"/> 70000-10000 3	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="13.75"/> 70000-20001 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B7500DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="12.16"/> 70000-20002 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> HH670-37710 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7500HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="13.2"/> 70000-40202 1	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7510HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16.16"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B7610HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="16.16"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="3.4"/> 70000-10500 4	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B7800HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="15.32"/> 70000-40201 4	<u>Hydraulic Filter</u> HH670-37710 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B8200DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.2"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B8200E

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B8200HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.2"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 32701-37950 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

B8200HSE

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 0	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 32701-37950 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

B9200HSD

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15741-11080 1	<u>Engine Oil</u> <input type="text" value="4.4"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="19"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.2"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 32701-37950 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX1500

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10000 2	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="10.8"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="2.4"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX1800

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2"/> 70000-10000 2	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="10.8"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

BX1830 Notes:

										Cooling System	3.1
4wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	2.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	10.8	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	5.0	<u>Steering Filter</u>	
HH150-32430 1	K1211-82320 1	70000-10000 2		12581-43012 1	70000-40202 1		NOT USED 0	70000-10500 5		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	NOT USED 0		12581-43012 1	70000-40200 1		HHK20-36990 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

BX1850 Notes:

										Cooling System	3.06
4wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	3.06	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	12.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	2.4	<u>Steering Filter</u>	
HH150-32430 1	K1211-82320 1	70000-10000 3		12581-43012 1	70000-40202 1		NOT USED 0	70000-10500 3		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	NOT USED 0		12581-43012 1	70000-40201 1		HHK20-36990 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

BX1860 Notes:

										Cooling System	3.06
4wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	3.1	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	12.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	2.4	<u>Steering Filter</u>	
HH150-32430 1	K1211-82320 1	70000-10000 4		12581-43012 1	70000-40201 3		K2581-36520 1	70000-40200 3		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	NOT USED 0		12581-43012 1	70000-40200 1		HHK20-36990 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

BX1870 Notes:

										Cooling System	3.0
4wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	3.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	12.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	2.4	<u>Steering Filter</u>	
HH150-32430 1	K1211-82320 1	70000-10000 3		12581-43012 1	70000-40201 3		K2581-36520 1	70000-10500 3		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	NOT USED 0		12581-43012 1	70000-40200 1		HHK20-36990 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

BX22 Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2.6"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="10.8"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX2200 Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2.6"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="10.8"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX2230 Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2.6"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="10.8"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX23 Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="10.8"/> 70000-40202 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

BX2350 Notes:

								Cooling System	3.3
4wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32430 1	K1211-82320 1	70000-10000 4	12581-43012 1	70000-40202 1	NOT USED 0	70000-10500 5	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	NOT USED 0	NOT USED 0	12581-43012 0	70000-40201 1	HHK20-36990 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

BX2360 Notes:

								Cooling System	3.3
4wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32430 1	K1211-82320 1	70000-10000 4	12581-43012 1	70000-40201 1	K2581-36520 1	70000-40200 5	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	NOT USED 0	NOT USED 0	12581-43012 1	70000-40200 1	HHK20-36990 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

BX2370 Notes:

								Cooling System	3.3
4wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32430 1	K1211-82320 1	70000-10001 1	12581-43012 1	70000-40201 3	K2581-36520 1	70000-10500 5	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	NOT USED 0	NOT USED 0	12581-43012 1	70000-40200 1	HHK20-36990 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

BX24 Notes:

								Cooling System	3.3
4wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32430 1	K1211-82320 1	70000-10000 4	12581-43012 1	70000-40202 1	NOT USED 0	70000-10500 5	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	NOT USED 0	NOT USED 0	12581-43012 1	70000-40201 1	HHK20-36990 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

BX25 TLB

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10000 4	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.4"/> 70000-40201 3	<u>Hydraulic Filter</u> K2581-36520 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-40200 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX25DLB

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.4"/> 70000-40201 3	<u>Hydraulic Filter</u> K2581-36520 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> K2561-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX2660

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10000 4	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.4"/> 70000-40201 3	<u>Hydraulic Filter</u> K2581-36520 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-40200 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

BX2670

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.4"/> 70000-40201 3	<u>Hydraulic Filter</u> K2581-36520 1	<u>F A Diff (center)</u> <input type="text" value="5.0"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

F2000 4wd

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 76611-58420 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="13.4"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

F2100 2wd

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="13.4"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

F2100 4wd

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.3"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="13.4"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

F2400 4wd

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="3.5"/> 70000-10001 1	<u>Fuel Primary</u> 16271-43560 1	<u>Trans Oil 1</u> <input type="text" value="13.4"/> 70000-20002 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value="1.6"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

F2560 2wd <=10401

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="2.5"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="13.5"/> 70000-40202 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

F2560 2wd >=10402

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.5"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="13.5"/> 70000-40202 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

F2560 4wd <=10595

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 67980-82630 1	<u>Engine Oil</u> <input type="text" value="2.5"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="13.5"/> 70000-40202 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value="1.4"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

F2560 4wd >=10596

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.5"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="13.5"/> 70000-40202 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text" value="1.4"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".5"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

F2880 Notes:

								Cooling System	4.9
4wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32094 1	6C060-99410 1	70000-10001 1 <input type="text" value="3.7"/>	12581-43012 1	70000-40201 4 <input type="text" value="14.8"/>	66021-36390 1	70000-10500 2 <input type="text" value="1.6"/>	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	32721-58242 1	NOT USED 0	12581-43012 1	NOT USED 0	HH660-36060 1	NOT USED 0 <input type="text"/>	70000-10500 1 <input type="text" value=".5"/>		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

F2880E Notes:

								Cooling System	4.9
2wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32094 1	6C060-99410 1	70000-10001 1 <input type="text" value="3.7"/>	12581-43012 1	70000-40201 4 <input type="text" value="14.8"/>	66021-36390 1	NOT USED 0 <input type="text"/>	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	32721-58242 1	NOT USED 0	12581-43012 1	NOT USED 0	HH660-36060 1	NOT USED 0 <input type="text"/>	NOT USED 0 <input type="text"/>		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

F3060 <=10988 Notes:

								Cooling System	4.1
4wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH160-32093 1	T0070-16323 1	70000-10000 3 <input type="text" value="2.8"/>	12581-43012 1	70000-40202 1 <input type="text" value="14.3"/>	66021-36390 1	70000-10500 2 <input type="text" value="1.4"/>	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	NOT USED 0	NOT USED 0	NOT USED 0	70000-40201 1	HH660-36060 1	NOT USED 0 <input type="text"/>	70000-10500 1 <input type="text" value=".5"/>		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

F3060 >=10989 Notes:

								Cooling System	4.1
4wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH160-32093 1	TC020-16320 1	70000-10000 3 <input type="text" value="2.8"/>	12581-43012 1	70000-40202 1 <input type="text" value="14.3"/>	66021-36390 1	70000-10500 2 <input type="text" value="1.4"/>	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	NOT USED 0	NOT USED 0	NOT USED 0	70000-40201 1	HH660-36060 1	NOT USED 0 <input type="text"/>	70000-10500 1 <input type="text" value=".5"/>		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

F3680 Notes:

										Cooling System	4.9
4wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	5.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	14.8	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	1.6	<u>Steering Filter</u>	
HH160-32093 1	TC020-16320 1	70000-10001 1		12581-43012 1	70000-40201 4		66021-36390 1	70000-10500 2		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	T0270-93220 1	70000-10000 2		12581-43012 1	NOT USED 0		HH660-36060 1	NOT USED 0		70000-10500 1	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

FZ2100 Notes:

										Cooling System	4.1
4wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	3.6	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	15.3	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	1.6	<u>Steering Filter</u>	
HH160-32093 1	15852-11082 1	70000-10001 1		16271-43560 1	70000-20001 4		66021-36390 1	70000-10500 2		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	NOT USED 0		NOT USED 0	NOT USED 0		30401-37580 1	NOT USED 0		70000-10500 2	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

FZ2400 Notes:

										Cooling System	4.1
4wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	3.6	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	15.3	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	1.6	<u>Steering Filter</u>	
HH160-32093 1	15852-11082 1	70000-10000 4		16271-43560 1	70000-20001 4		66021-36390 1	70000-10500 2		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	NOT USED 0		NOT USED 0	NOT USED 0		30401-37580 1	NOT USED 0		70000-10500 2	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

G1800 Notes:

										Cooling System	3.5
2wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	3.2	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	6.1	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>	
HH150-32430 1	15852-11082 1	70000-10001 1		12581-43012 1	70000-20001 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	NOT USED 0		12581-43012 1	70000-20000 3		HH660-36060 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

G1900 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="6.1"/> 70000-20001 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-20000 3	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

G2000 (Gas) Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="6.1"/> 70000-20001 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-20000 3	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

G2160 (Diesel) Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2.95"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="4.75"/> 70000-40200 5	<u>Hydraulic Filter</u> HHK20-36990 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1310-36490 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

G2460G (Gas) Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2.7"/> 70000-10200 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="4.75"/> 70000-40200 5	<u>Hydraulic Filter</u> HHK20-36990 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1310-36490 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

G4200H Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10000 3	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="7.5"/> 70000-20001 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

G5200H Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="7.5"/> 70000-20001 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

G6200H Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10001 1	<u>Fuel Primary</u> 15231-43560 1	<u>Trans Oil 1</u> <input type="text" value="8"/> 70000-20001 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

GR2000G (Gas) <=11562 Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> E7188-32110 1	<u>Outer Air</u> E7192-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40200 4	<u>Hydraulic Filter</u> HHK20-36990 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7192-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1253-36490 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

GR2000G (Gas) >=11563

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> E7188-32110 1	<u>Outer Air</u> E7192-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40200 4	<u>Hydraulic Filter</u> HHK20-36990 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7192-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K2011-36332 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

GR2010G

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> E7188-32110 1	<u>Outer Air</u> E7192-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10000 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40201 1	<u>Hydraulic Filter</u> K2011-36332 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7192-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

GR2020G

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> E7188-32110 1	<u>Outer Air</u> E7192-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40201 1	<u>Hydraulic Filter</u> K2011-36332 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7192-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

GR2100 (Diesel) <=13615

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.0"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40200 4	<u>Hydraulic Filter</u> HHK20-36990 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1253-36490 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

GR2100 (Diesel) >=13616

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.0"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40200 4	<u>Hydraulic Filter</u> HHK20-36990 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K2011-36332 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

GR2110

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.0"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40201 1	<u>Hydraulic Filter</u> K2011-36332 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

GR2120

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.0"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="3.5"/> 70000-40201 1	<u>Hydraulic Filter</u> K2011-36332 1	<u>F A Diff (center)</u> <input type="text" value="2.0"/> 70000-40200 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L185DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> 15213-32090 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.9"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="24"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text" value="1.2"/> 70000-10500 2	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".8"/> 70000-10500 2
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L185F Notes:

2wd Manual Trans Cooling System

<u>Engine Oil Filter</u> 15213-32090 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="4.9"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 0	<u>Trans Oil 1</u> <input type="text" value="24"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2050DT Notes:

4wd Manual Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="6.7"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2050F Notes:

2wd Manual Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="6.7"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2250DT <=50677 Notes:

4wd Mech Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2250DT >=50678

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2250F <=10489

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2250F >=10490

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2350DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="6.7"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2350F Notes:

										Cooling System	6.3
2wd Manual Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.7	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	29.6	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>	
HH164-32430 1	70000-11221 1	70000-10001 1		15221-43170 1	70000-20005 1		34150-37710 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 3		NOT USED 0	70000-20002 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

L235DT Notes: .3 qts each FA gear case.

										Cooling System	7
4wd Mech Shuttle Shift											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.4	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	25.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	2.4	<u>Steering Filter</u>	
HH164-32430 1	70000-11221 1	70000-10001 1		15521-43160 1	70000-20005 1		38430-37710 1	70000-10500 3		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 3		NOT USED 0	70000-20001 2		NOT USED 0	NOT USED 1		70000-10500 1	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

L235F Notes:

										Cooling System	7.0
2wd Mech Shuttle Shift											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.4	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	25.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>	
HH164-32430 1	70000-11221 1	70000-10001 1		15521-43160 1	70000-20005 1		38430-37710 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 3		NOT USED 0	70000-20001 2		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

L245DT Notes:

										Cooling System	7
4wd Manual Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.4	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	24	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	1.2	<u>Steering Filter</u>	
15213-32090 1	70000-11221 1	70000-10001 1		15221-43170 1	70000-20005 1		34150-37710 1	70000-10500 2		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 3		NOT USED 0	70000-20001 1		NOT USED 0	NOT USED 0		70000-10500 2	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L245F Notes:

2wd Manual Trans Cooling System

<u>Engine Oil Filter</u> 15213-32090 1	<u>Outer Air</u> 70000-11221 1	<u>Engine Oil</u> <input type="text" value="6.4"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="24"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2500DT Notes:

4wd Manual Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="6.9"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2500F Notes:

2wd Manual Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="6.9"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2550DT <=50761 Notes:

4wd Mech Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2550DT >=50762

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2550F <=10373

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2550F >=10374

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2550GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.4"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> 30401-37580 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2600DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2600F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2650DT w/Dual Air Filter

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2650DT w/Single Air Filter

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2650DT-W w/Dual Air Filter

Notes:

4wd Mech Shuttle Shift w/Wet Main Clutch

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="31.2"/> 70000-40205 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2650DT-W w/Single Air Filter

Notes:

4wd Mech Shuttle Shift w/Wet Main Clutch

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="31.2"/> 70000-40205 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2650F w/ Single Air Filter

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2650F w/Dual Air Filter

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2650GST w/Dual Air Filter

Notes: Steering Filter is filtering the return oil from the power steering system.

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.4"/> 70000-40205 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> 30401-37580 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2650GST w/Single Air Filter

Notes: Steering Filter is filtering the return oil from the power steering system.

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.4"/> 70000-40205 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> 30401-37580 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L275DT

Notes: .3 qts each FA gear case.

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.4"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="25.4"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text" value="2.7"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".6"/> 70000-10500 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L275F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.4"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="25.4"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2800DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="29.4"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2800F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2800HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="24.8"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L285

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH151-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="9.4"/> 70000-10001 2	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29"/> 70000-20005 1	<u>Hydraulic Filter</u> 37300-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2850DT <=50573

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 0	<u>Transmission Filter</u> 31391-38830 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2850DT >=50574

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 0	<u>Transmission Filter</u> 38430-37710 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2850F <=10328

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 0	<u>Transmission Filter</u> 31391-38830 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2850F >=10329

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 0	<u>Transmission Filter</u> 38430-37710 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2850GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.4"/> 70000-40205 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> 30401-37580 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2900DT (w/dual air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2900DT (w/single air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2900F (w/dual air filter)

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> HH330-82630 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L2900F (w/single air filter)

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> HH330-82630 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2900GST (w/dual air filter)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> HH330-82630 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2900GST (w/single air filter)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> HH330-82630 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L2950DT w/Dual Air Filter

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

**L2950DT w/Single Air Filter
4wd Mech Shuttle Shift**

Notes:

										Cooling System	4.9
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	60.0	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.8	<u>Steering Filter</u>	
HH164-32430 1	70000-11081 1	70000-10001 1		15521-43160 1	70000-20005 1		31391-38830 1	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 2		NOT USED 0	70000-20002 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

**L2950DT-W w/Dual Air Filter
4wd Mech Shuttle Shift w/Wet Main Clutch**

Notes:

										Cooling System	4.9
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	31.2	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.8	<u>Steering Filter</u>	
HH164-32430 1	15287-11080 1	70000-10001 1		15521-43160 1	70000-40205 1		31391-38830 1	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	15287-11490 1	70000-10000 2		NOT USED 0	70000-40201 3		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

**L2950DT-W w/Single Air Filter
4wd Mech Shuttle Shift w/Wet Main Clutch**

Notes:

										Cooling System	4.9
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	31.2	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.8	<u>Steering Filter</u>	
HH164-32430 1	70000-11081 1	70000-10001 1		15521-43160 1	70000-40205 1		31391-38830 1	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 2		NOT USED 0	70000-40201 3		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

**L2950F w/Dual Air Filter
2wd Mech Shuttle Shift**

Notes:

										Cooling System	4.9
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	30.0	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>	
HH164-32430 1	15287-11080 1	70000-10001 1		15521-43160 1	70000-20005 1		30400-37710 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	15287-11490 1	70000-10000 2		NOT USED 0	70000-20002 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

**L2950F w/Single Air Filter
2wd Mech Shuttle Shift**

Notes:

										Cooling System	4.9
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	30.0	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>	
HH164-32430 1	70000-11081 1	70000-10001 1		15521-43160 1	70000-20005 1		30400-37710 1	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 2		NOT USED 0	70000-20002 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

**L2950GST w/Dual Air Filter
4wd Glide Shift Trans**

Notes: Steering Filter is filtering the return oil from the power steering system.

										Cooling System	4.9
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	28.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.8	<u>Steering Filter</u>	
HH164-32430 1	15287-11080 1	70000-10001 1		15521-43160 1	70000-40205 1		30400-37710 1	70000-10500 7		30401-37580 1	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	15287-11490 1	70000-10000 2		NOT USED 0	70000-40202 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

**L2950GST w/Single Air Filter
4wd Glide Shift Trans**

Notes: Steering Filter is filtering the return oil from the power steering system.

										Cooling System	4.9
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	6.0	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	28.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.8	<u>Steering Filter</u>	
HH164-32430 1	70000-11081 1	70000-10001 1		15521-43160 1	70000-40205 1		30400-37710 1	70000-10500 7		30401-37580 1	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 2		NOT USED 0	70000-40202 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

**L3000DT
4wd Manual Trans**

Notes:

										Cooling System	6.3
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	5.8	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	29.6	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH164-32430 1	T0070-16323 1	70000-10001 1		15221-43170 1	70000-20005 1		34150-37710 1	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
NOT USED 0	NOT USED 0	70000-10000 2		NOT USED 0	70000-20002 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3000F Notes: Cooling System

2wd Manual Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="29.6"/> 70000-20005 1	<u>Hydraulic Filter</u> 34150-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3010DT Notes: Cooling System

2wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3010F Notes: Cooling System

2wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3010GST Notes: Cooling System

4wd Glide Shift Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3010HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L305DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> 15213-32090 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.6"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="32"/> 70000-20005 1	<u>Hydraulic Filter</u> 37300-37710 1	<u>F A Diff (center)</u> <input type="text" value="2.6"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".7"/> 70000-10500 2
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L305F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> 15213-32090 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="6.6"/> 70000-10001 1	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="32"/> 70000-20005 1	<u>Hydraulic Filter</u> 37300-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3130DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3130F Notes:

2wd Mech Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3130GST Notes:

4wd Glide Shift Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3130HST Notes:

4wd Hydro Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3200DT Notes:

4wd Manual Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="29.2"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3200F Notes: Cooling System

2wd Manual Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="28.8"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3200HST Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="24.8"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3240DT Notes: Cooling System

4wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3240F Notes: Cooling System

2wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3240GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3240HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3240HSTC(-1)

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3240HSTC-3

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3250DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3250F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30"/> 70000-20005 1	<u>Hydraulic Filter</u> 38430-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3300DT (w/dual air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3300DT (w/single air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3300F (w/dual air filter)

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3300F (w/single air filter)

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3300GST (w/dual air filter)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3300GST (w/single air filter)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3400DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="29.2"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3400F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="7.1"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3400HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="24.8"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3410DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3410GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3410HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="5.8"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3430DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3430GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3430HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3450DT w/Dual Air Filter

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3450DT w/Single Air Filter

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3450DT-W w/Dual Air Filter

Notes:

4wd Mech Shuttle Shift w/Wet Main Clutch

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="31.2"/> 70000-40205 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3450DT-W w/Single Air Filter

Notes:

4wd Mech Shuttle Shift w/Wet Main Clutch

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="31.2"/> 70000-40205 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3450F w/Dual Air Filter

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3450F w/Single Air Filter

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3450GST w/Dual Air Filter

Notes: Steering Filter is filtering the return oil from the power steering system.

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.4"/> 70000-40205 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> 30401-37580 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3450GST w/Single Air Filter

Notes: Steering Filter is filtering the return oil from the power steering system.

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.4"/> 70000-40205 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> 30401-37580 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L345DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="9.6"/> 70000-10001 2	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="32"/> 70000-20005 1	<u>Hydraulic Filter</u> 37300-37710 1	<u>F A Diff (center)</u> <input type="text" value="2.6"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".7"/> 70000-10500 2
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L345F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="9.6"/> 70000-10001 2	<u>Fuel Primary</u> 15221-43170 1	<u>Trans Oil 1</u> <input type="text" value="32"/> 70000-20005 1	<u>Hydraulic Filter</u> 37300-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L35

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="5.1"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3540GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3540HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3540HSTC(-1)

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3540HSTC-3

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L355SS Notes: Cooling System

4wd Hyd Shuttle Shift

<u>Engine Oil Filter</u> HH151-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="9.6"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="33"/> 70000-20005 1	<u>Hydraulic Filter</u> 37300-37710 1	<u>F A Diff (center)</u> <input type="text" value="2.6"/> 70000-10500 3	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".7"/> 70000-10500 2
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3560DT Notes: Cooling System

4wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3560GST Notes: Cooling System

4wd Glide Shift Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3560HST Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3560HSTC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.1"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="44.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3600DT (w/dual air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3600DT (w/single air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3600GST (w/dual air cleaner)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3600GST (w/single air cleaner)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3650DT w/Dual Air Filter

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3650DT w/Single Air Filter

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3650DT-W w/Dual Air Filter

Notes:

4wd Mech Shuttle Shift w/Wet Main Clutch

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="31.2"/> 70000-40205 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3650DT-W w/Single Air Filter

Notes:

4wd Mech Shuttle Shift w/Wet Main Clutch

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="31.2"/> 70000-40205 1	<u>Hydraulic Filter</u> 31391-38830 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3650F w/Dual Air Filter

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3650F w/Single Air Filter

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="30.0"/> 70000-20005 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3650GST w/Dual Air Filter

Notes: Steering Filter is filtering the return oil from the power steering system.

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15287-11080 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.4"/> 70000-40205 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> 30401-37580 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15287-11490 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3650GST w/Single Air Filter

Notes: Steering Filter is filtering the return oil from the power steering system.

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 0	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="8.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="28.8"/> 70000-40205 1	<u>Hydraulic Filter</u> 30400-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.8"/> 70000-10500 7	<u>Steering Filter</u> 30401-37580 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3700SUHSTP

Notes: Inner air filter element is optional and will fit with the original air cleaner body and outer air filter.

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.5"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="24.8"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3710DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3710GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3710HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3750DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="9.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.5"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="2.9"/> 70000-10500 6
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3750F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="9.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.5"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3800DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.5"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="29.2"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3800F Notes: Cooling System

2wd Manual Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.5"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="28.8"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3800HST Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="7.5"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="24.8"/> 70000-40205 1	<u>Hydraulic Filter</u> HH3A0-82623 1	<u>F A Diff (center)</u> <input type="text" value="4.8"/> 70000-10500 5	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3830DT Notes: Cooling System

4wd Manual Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3830F Notes: Cooling System

2wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3830GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3830HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L39

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10000 6	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3940DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L3940GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3940HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3940HSTC(-1)

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L3940HSTC-3

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4060DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4060GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4060HST

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4060HSTC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4150DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="9.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.5"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.3"/> 70000-10500 7
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4150F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="9.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.5"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17381-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4200DT (w/dual air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4200DT (w/single air filter)

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4200F (w/dual air filter)

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4200F (w/single air filter)

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4200GST (w/dual air filter)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4200GST (w/single air filter)

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> T0070-16323 1	<u>Engine Oil</u> <input type="text" value="6.3"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4240DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4240GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4240HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4240HSTC(-1) <=51010

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4240HSTC(-1) >=51011

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4240HSTC-3

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 1	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4300DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4300F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4310DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4310F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4310GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4310HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4330DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4330GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4330HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4400DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="42.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4400F Notes: Cooling System

2wd Manual Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="42.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4400HST Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-40200 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L45 TLB Notes: Cooling System

4wd Hydro Trans

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="48.8"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-40200 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4600DT Notes: Cooling System

4wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="42.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4600F Notes:

2wd Mech Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="42.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4600HST Notes:

4wd Hydro Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="42.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="6.9"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4610GST Notes:

4wd Glide Shift Trans Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="41.2"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="7.9"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4630DT Notes:

4wd Mech Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4630GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4630HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4740GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4740GST-3

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4740HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4740HST-3

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4740HSTC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4740HSTC-3

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L4760GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4760HST

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L4760HSTC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="45.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L48

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="7.8"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="53.9"/> 70000-20002 5	<u>Hydraulic Filter</u> HH330-82630 1	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L5030GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5030HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.7"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="9.5"/> 70000-10500 10	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5040GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5040GST-3

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L5060GST

Notes:

4wd Glide Shift Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5240HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5240HST-3

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5240HSTC(-1) <=50612

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L5240HSTC(-1) >=50613

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5240HSTC-3

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5460HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5460HSTC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L5740HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5740HST-3

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5740HSTC(-1) <=51056

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L5740HSTC(-1) >=51057

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

L5740HSTC-3

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L6060HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

L6060HSTC

Notes:

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TD270-93230 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> TD270-93220 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M100GXDTC

Notes: Each front axle gear case holds 3.7 qts.

4wd 24 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.1"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="68.7"/> 70000-40205 3	<u>Hydraulic Filter</u> HH3Y0-82590 1	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M100XDTC

Notes: Brake fluid is .3 qts of UDT or SUDT. Each front axle gear case holds 3.7 qts.

4wd 16 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 52241-21650 2	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH520-15320 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-40100 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SDS

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SDSC

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SDSC1

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/wide cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M105SDSCC

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SDSCC1

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/wide cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SDSF

Notes:

2wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SDSL

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed Low Profile

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M105SH Notes:

2wd 16 Sp Hyd Shuttle, Swing Shift Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SHC Notes:

2wd 16 Sp Hyd Shuttle, Swing Shift w/cab Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SHC1 Notes:

2wd 16 Sp Hyd Shuttle, Swing Shift w/wide cab Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SHD Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, Swing Shift Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M105SHDC

Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, Swing Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105SHDC1

Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, Swing Shift w/wide cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M105XDTC

Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.1"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 52241-21650 2	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH520-15320 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SDS

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M108SDS2

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed 540/1000 PTO

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SDSC

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SDSC2

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/cab 540/1000 PTO

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SDSF

Notes:

2wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M108SDSL

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SDSL2

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed 540/1000 PTO

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SH

Notes:

2wd 16 Sp Hyd Shuttle, Swing Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SHC

Notes:

2wd 16 Sp Hyd Shuttle, Swing Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M108SHD

Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, Swing Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SHDC

Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, Swing Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108SHDC2

Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, Swing Shift w/cab 540/1000 PTO

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M108XDTC

Notes: 3.7 qts each FA gear case

4wd 16 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.1"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 52241-21650 2	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH520-15320 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M110GXDTC

Notes: Each front axle gear case holds 3.7 qts.

4wd 24 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.1"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="68.7"/> 70000-40205 3	<u>Hydraulic Filter</u> HH3Y0-82590 1	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M110XDTC

Notes: Brake fluid is .3 qts of UDT or SUDT. Each front axle gear case holds 3.7 qts.

4wd 16 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.1"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 52241-21650 2	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH520-15320 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M125XDTC

Notes: 4.8 qts each FA gear case

4wd 16 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 3P300-11220 0	<u>Engine Oil</u> <input type="text" value="22.0"/> 70000-10001 5	<u>Fuel Primary</u> HH166-43560 0	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="12.7"/> 70000-10500 13	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 52241-21650 2	<u>Inner Air</u> 3P300-11230 0	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH520-15320 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="9.6"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M126GXDTC

Notes: 4.8 qts each FA gear case

4wd 24 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1G0-32430 1	<u>Outer Air</u> 3P300-11220 1	<u>Engine Oil</u> <input type="text" value="15.4"/> 70000-10001 4	<u>Fuel Primary</u> 1J521-43170 1	<u>Trans Oil 1</u> <input type="text" value="68.7"/> 70000-40205 3	<u>Hydraulic Filter</u> HH3Y0-82590 1	<u>F A Diff (center)</u> <input type="text" value="13.7"/> 70000-10500 14	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 1J520-11222 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="9.6"/> 70000-10500 10
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M126XDTC

Notes: Brake fluid is .3 qts of UDT or SUDT. Each front axle gear case holds 4.8 qts.

4wd 16 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1G0-32430 1	<u>Outer Air</u> 3P300-11220 1	<u>Engine Oil</u> <input type="text" value="15.4"/> 70000-10001 4	<u>Fuel Primary</u> 1G410-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="13.7"/> 70000-40200 14	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 52241-21650 2	<u>Inner Air</u> 3P300-11230 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH520-15320 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="9.6"/> 70000-40102 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M135GXDTSC/GXDTSC (-F)

Notes: 4.8 qts each FA gear case.

4wd 24 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1G0-32430 1	<u>Outer Air</u> 3P300-11220 1	<u>Engine Oil</u> <input type="text" value="15.4"/> 70000-10001 4	<u>Fuel Primary</u> 1J521-43170 1	<u>Trans Oil 1</u> <input type="text" value="68.7"/> 70000-40205 3	<u>Hydraulic Filter</u> HH3Y0-82590 1	<u>F A Diff (center)</u> <input type="text" value="13.7"/> 70000-10500 14	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 1J520-11222 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="9.6"/> 70000-10500 10
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M135XDTC

Notes: Brake fluid is .3 qts of UDT or SUDT. Each front axle gear case holds 4.8 qts.

4wd 16 Sp Hyd Shuttle, 8 Sp Power Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1G0-32430 1	<u>Outer Air</u> 3P300-11220 1	<u>Engine Oil</u> <input type="text" value="15.4"/> 70000-10001 4	<u>Fuel Primary</u> 1G410-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="13.7"/> 70000-40200 14	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 52241-21650 2	<u>Inner Air</u> 3P300-11230 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HH520-15320 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="9.6"/> 70000-40102 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4000

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH151-32430 1	<u>Outer Air</u> 70000-11081 1	<u>Engine Oil</u> <input type="text" value="12.7"/> 70000-10001 3	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="47.6"/> 70000-20005 2	<u>Hydraulic Filter</u> 36200-82630 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20002 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M4030DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="15.6"/> 70000-10001 4	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> 35861-82630 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4030F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="15.6"/> 70000-10001 4	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> 35861-82630 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4030SU

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="11.1"/> 70000-10001 3	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> 35861-82630 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4050DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH151-32430 1	<u>Outer Air</u> 70000-11080 1	<u>Engine Oil</u> <input type="text" value="12.7"/> 70000-10001 3	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="52.9"/> 70000-20005 2	<u>Hydraulic Filter</u> 36200-82630 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=".6"/> 70000-10500 2	<u>F A Gear Case</u> <input type="text" value="2.6"/> 70000-10500 6
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M4050F Notes: Cooling System

2wd Manual Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u> <input type="text" value="12.7"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u> <input type="text" value="52.9"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u> <input type="text" value=""/>	<u>Steering Filter</u>		
HH151-32430 1	70000-11080 1	70000-10001 3	15601-43170 1	70000-20005 2	36200-82630 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u> <input type="text" value=""/>	<u>F A Gear Case</u> <input type="text" value=""/>		
NOT USED 0	NOT USED 0	70000-10000 1	NOT USED 0	70000-20001 4	NOT USED 0	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

M4700DT Notes: Cooling System

4wd Manual Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u> <input type="text" value="8.5"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u> <input type="text" value="40.2"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u> <input type="text" value="8.5"/>	<u>Steering Filter</u>		
HH164-32430 1	R1401-42270 1	70000-10001 2	15521-43160 1	70000-20005 2	HH330-82630 2	70000-10500 9	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u> <input type="text" value=""/>	<u>F A Gear Case</u> <input type="text" value=""/>		
NOT USED 0	R2401-42280 1	70000-10000 1	NOT USED 0	70000-20000 1	NOT USED 0	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

M4700F Notes: Cooling System

2wd Manual Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u> <input type="text" value="8.5"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u> <input type="text" value="40.2"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u> <input type="text" value=""/>	<u>Steering Filter</u>		
HH164-32430 1	R1401-42270 1	70000-10001 2	15521-43160 1	70000-20005 2	HH330-82630 2	NOT USED 0	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u> <input type="text" value=""/>	<u>F A Gear Case</u> <input type="text" value=""/>		
NOT USED 0	R2401-42280 1	70000-10000 1	NOT USED 0	70000-20000 1	NOT USED 0	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

M4800SU Notes: Cooling System

2wd Manual Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u> <input type="text" value="7.6"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u> <input type="text" value="42.4"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u> <input type="text" value=""/>	<u>Steering Filter</u>		
HH164-32430 1	R1401-42270 1	70000-10001 2	15521-43160 1	70000-20005 2	HH330-82630 2	NOT USED 0	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u> <input type="text" value=""/>	<u>F A Gear Case</u> <input type="text" value=""/>		
NOT USED 0	R2401-42280 1	NOT USED 0	NOT USED 0	70000-20001 1	NOT USED 0	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M4800SUD

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="42.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4900S

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4900SC

Notes:

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 16631-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> T0270-72070 1	<u>CVT Air Filter</u> NOT USED 0						

M4900SD

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M4900SDC

Notes:

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 16631-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> T0270-72070 1	<u>CVT Air Filter</u> NOT USED 0						

M4900SU

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4900SUD

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M4950

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15621-11210 1	<u>Engine Oil</u> <input type="text" value="14.5"/> 70000-10001 3	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15621-11180 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M4950DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 15621-11210 1	<u>Engine Oil</u> <input type="text" value="14.5"/> 70000-10001 3	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 0	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15621-11180 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=".6"/> 70000-10500 2	<u>F A Gear Case</u> <input type="text" value="2.6"/> 70000-10500 6
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5030DT

Notes:

4wd Low Profile w/Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="15.6"/> 70000-10001 4	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5030F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="15.6"/> 70000-10001 4	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5030SU

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="15.6"/> 70000-10001 4	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5030SUMDT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="15.6"/> 70000-10001 4	<u>Fuel Primary</u> 15601-43170 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5040DT

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5040DT-1

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5040DTC

Notes: 3.7 qts each FA case.

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5040DTC-1

Notes: 3.7 qts each FA case.

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M5040F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5040F-1

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5040FC

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5040FC-1

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M5040HD-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5040HDC

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M5040HDC-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5140DT

Notes: Each front axle gear case holds 3.2 qts.

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="7.0"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="6.4"/> 70000-10500 7
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5140DTC

Notes: Each front axle case hold 3.2 qts.

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="7.0"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="6.4"/> 70000-10500 7
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M5140F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5140FC

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5140HD

Notes: Each front axle case holds 3.2 qts.

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="7.0"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="6.4"/> 70000-10500 7
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5140HDC

Notes: Each front axle case holds 3.2 qts.

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="7.0"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="6.4"/> 70000-10500 7
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M5400DT(SD)

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="40.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5400F(S)

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="40.2"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20000 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5640SU S/N <=10002

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="42.3"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5640SU S/N >=10159

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="42.3"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5640SU S/N 10003-10158

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="42.3"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5640SUD S/N <=50004

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="42.3"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5640SUD S/N >=50334

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> RD452-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="42.3"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3C301-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5640SUD S/N 50005-50333

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="7.6"/> 70000-10001 2	<u>Fuel Primary</u> 6A320-59930 1	<u>Trans Oil 1</u> <input type="text" value="42.3"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5700

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5700-CAB

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5700DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5700DT-CAB

Notes:

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5700HD

Notes:

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5700HDC

Notes:

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15831-43380 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> HH166-43560 1	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M59 TLB

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="9.9"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="48.8"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="13.2"/> 70000-40200 14	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 9	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5950DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="10.4"/> 70000-10001 2	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=".6"/> 70000-10500 2	<u>F A Gear Case</u> <input type="text" value="2.6"/> 70000-10500 6
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5950DTC

Notes: 2.6 qts each FA case

4wd Manual Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="10.4"/> 70000-10001 2	<u>Fuel Primary</u> 15451-43560 0	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> 36919-50310 2	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=".6"/> 70000-10500 2	<u>F A Gear Case</u> <input type="text" value="2.6"/> 70000-10500 6
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M5950F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="10.4"/> 70000-10001 2	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M5950FC

Notes:

2wd Manual Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="10.4"/> 70000-10001 2	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> 36919-50310 2	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 3	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6030DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="12.2"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6030F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 17301-11080 1	<u>Engine Oil</u> <input type="text" value="12.2"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 17301-11180 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6040DT

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M6040DT-1

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6040DTC

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M6040DTC-1

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M6040F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M6040F-1

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6040FC

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M6040FC-1

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M6040HD

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M6040HD-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6040HDC

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M6040HDC-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M6040HDNB

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift Narrow

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M604HDNB-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift Narrow

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH3A0-82623 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6060HD

Notes: Each FA gear case holds 3.7 qts.

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="12.7"/> 70000-10001 3	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6060HDC

Notes: Each FA gear case holds 3.7 qts.

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="12.7"/> 70000-10001 3	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M6060HFC

Notes:

2wd Hyd Shuttle w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="12.7"/> 70000-10001 3	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M6800 Notes: Cooling System

2wd Manual Trans

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6800DT Notes: Cooling System

4wd Manual Trans

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6800HD Notes: FA case is 3.7 qts each side. Cooling System

4wd Hyd Shuttle Shift

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6800HDC Notes: FA case is 3.7 qts each side. Cooling System

4wd Hyd Shuttle Shift w/cab

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M6800-S

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6800S-CAB

Notes: 3.7 qts each FA gear case

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="3.7"/> 70000-10500 8	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6800-SDT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6800SDT-CAB

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="45.4"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.3"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="3.7"/> 70000-10500 8	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M6950DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="13.9"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.8"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=".7"/> 70000-10500 2	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6950DTC

Notes: 3.7 qts each FA gear case

4wd Manual Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="13.9"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 0	<u>Trans Oil 1</u> <input type="text" value="52.8"/> 70000-20005 2	<u>Hydraulic Filter</u> 36330-82630 1	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6950F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="13.9"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.8"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M6950FC

Notes:

2wd Manual Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="13.9"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.8"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> 36330-82630 1
<u>Cab Filter (Outside)</u> 36919-50310 2	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7040DT

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040DT-1

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040DTC

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M7040DTC-1

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7040F Notes: Cooling System

2wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040F-1 Notes: Cooling System

2wd Mech Shuttle Shift

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040FC Notes: Cooling System

2wd Mech Shuttle Shift w/cab

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M7040FC-1 Notes: Cooling System

2wd Mech Shuttle Shift w/cab

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7040HD

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040HD-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040HDC

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M7040HDC-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7040HDC-LTD

Notes: 3.7 qts each FA case.

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M7040HDNB

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift Narrow

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040HDNB-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift Narrow

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HH3A0-82623 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040SU

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="46.5"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7040SUD

Notes: Each front axle gear case uses 3.2 qts.

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="46.5"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="7.0"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="6.4"/> 70000-10500 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040SUH

Notes:

2wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7040SUHD

Notes: 3.2 qts each FA case.

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="11.6"/> 70000-10001 3	<u>Fuel Primary</u> HH1G0-43560 1	<u>Trans Oil 1</u> <input type="text" value="50.7"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="7.0"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 3	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="6.4"/> 70000-10500 7
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7060HD

Notes: Each FA gear case holds 3.7 qts.

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59800-26110 1	<u>Engine Oil</u> <input type="text" value="12.7"/> 70000-10001 3	<u>Fuel Primary</u> 1J800-43170 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="5.8"/> 70000-10500 6	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 3A111-19130 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7060HD12

Notes: Each FA gear case holds 3.7 qts.

4wd Hyd Shuttle Shift

										Cooling System	8.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	12.7	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	59.2	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	5.8	<u>Steering Filter</u>	
HH1C0-32430 1	59800-26110 1	70000-10001 3		1J800-43170 1	70000-40205 3		HHTA0-37710 2	70000-10500 6		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
NOT USED 0	3A111-19130 1	70000-10000 1		NOT USED 0	NOT USED 0		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M7060HDC

Notes: Each FA gear case holds 3.7 qts.

4wd Hyd Shuttle Shift w/cab

										Cooling System	8.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	12.7	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	59.2	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	5.8	<u>Steering Filter</u>	
HH1C0-32430 1	59800-26110 1	70000-10001 3		1J800-43170 1	70000-40205 3		HHTA0-37710 2	70000-10500 6		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
T1855-71600 1	3A111-19130 1	70000-10000 1		NOT USED 0	NOT USED 0		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

M7060HDC12

Notes: Each FA gear case holds 3.7 qts.

4wd Hyd Shuttle Shift w/cab

										Cooling System	8.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	12.7	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	59.2	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	5.8	<u>Steering Filter</u>	
HH1C0-32430 1	59800-26110 1	70000-10001 3		1J800-43170 1	70000-40205 3		HHTA0-37710 2	70000-10500 6		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
T1855-71600 1	3A111-19130 1	70000-10000 1		NOT USED 0	NOT USED 0		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

M7060HFC

Notes:

2wd Hyd Shuttle w/cab

										Cooling System	8.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	12.7	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	59.2	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>	
HH1C0-32430 1	59800-26110 1	70000-10001 3		1J800-43170 1	70000-40205 3		HHTA0-37710 2	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	
T1855-71600 1	3A111-19130 1	70000-10000 1		NOT USED 0	NOT USED 0		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7580DT

Notes: Front axle requires UDT. FA caes is 4.9 qts per side.

4wd Mech Shuttle Shift (also models w/ IC shuttle shift)

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15724-11080 1	<u>Engine Oil</u> <input type="text" value="17.2"/> 70000-10001 4	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="12.6"/> 70000-20000 13	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 33960-11230 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="4.9"/> 70000-20000 10
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7580DT-C

Notes: Front axle requires UDT. FA caes is 4.9 qts per side.

4wd Mech Shuttle Shift (also models w/ IC shuttle shift)

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15724-11080 1	<u>Engine Oil</u> <input type="text" value="17.2"/> 70000-10001 4	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="12.6"/> 70000-20000 13	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 36919-50310 2	<u>Inner Air</u> 33960-11230 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="4.9"/> 70000-20000 10
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7950DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="13.9"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.8"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=".7"/> 70000-10500 2	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M7950DTC

Notes:

4wd Manual Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15571-11210 1	<u>Engine Oil</u> <input type="text" value="13.9"/> 70000-10001 3	<u>Fuel Primary</u> 15451-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.8"/> 70000-20005 2	<u>Hydraulic Filter</u> 35861-82630 1	<u>F A Diff (center)</u> <input type="text" value="8.5"/> 70000-10500 9	<u>Steering Filter</u> 36330-63460 1
<u>Cab Filter (Outside)</u> 36919-50310 2	<u>Inner Air</u> 15571-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=".7"/> 70000-10500 2	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M7950F Notes:

								Cooling System	14.4	
2wd Manual Trans										
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	13.9	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	52.8	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>
HH160-32430 1	15571-11210 1	70000-10001 3		15451-43560 1	70000-20005 2		35861-82630 1	NOT USED 0		36330-63460 1
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>
NOT USED 0	15571-11180 1	70000-10000 2		NOT USED 0	70000-20001 4		NOT USED 0	NOT USED 0		NOT USED 0
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>									
NOT USED 0	NOT USED 0									

M7950FC Notes:

								Cooling System	14.4	
2wd Manual Trans w/cab										
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	13.9	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	52.8	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>
HH160-32430 1	15571-11210 1	70000-10001 3		15451-43560 1	70000-20005 2		35861-82630 1	NOT USED 0		36330-63460 1
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>
36919-50310 2	15571-11180 1	70000-10000 2		NOT USED 0	70000-20001 4		NOT USED 0	NOT USED 0		NOT USED 0
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>									
NOT USED 0	NOT USED 0									

M8200 Notes:

								Cooling System	9.5	
2wd Mech Shuttle Shift										
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	54.9	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>		<u>Steering Filter</u>
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-20005 2		HH330-82630 2	NOT USED 0		NOT USED 0
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 1	70000-20001 4		NOT USED 0	NOT USED 0		NOT USED 0
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>									
NOT USED 0	NOT USED 0									

M8200C Notes: FA case is 3.7 qts each side.

								Cooling System	9.5	
2wd Mech Shuttle Shift w/cab										
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	54.9	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	5.3	<u>Steering Filter</u>
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-20005 2		HH330-82630 1	70000-10500 3		NOT USED 0
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>
TA043-71600 1	55231-26150 1	NOT USED 0		NOT USED 1	70000-20001 4		NOT USED 0	NOT USED 0		70000-10500 8
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>									
NOT USED 0	NOT USED 0									

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8200DT

Notes: FA case is 3.7 qts each side.

4wd Mech Shuttle Shift

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="54.9"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text" value="5.3"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-20005	2	HH330-82630	2	70000-10500	6	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="3.7"/>		
NOT USED	0	55231-26150	1	NOT USED	0	NOT USED	1	70000-20001	4	NOT USED	0	NOT USED	0	70000-10500	8	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

M8200DTC

Notes: FA case is 3.7 qts each side.

4wd Mech Shuttle Shift w/cab

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="54.9"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text" value="5.3"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-20005	2	HH330-82630	2	70000-10500	6	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="3.7"/>		
TA043-71600	1	55231-26150	1	NOT USED	0	NOT USED	1	70000-20001	4	NOT USED	0	NOT USED	0	70000-10500	8	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

M8200HD

Notes: FA case is 3.7 qts each side.

4wd Hyd Shuttle Shift

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="57.0"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text" value="5.3"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-40205	3	HH330-82630	2	70000-10500	6	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="3.7"/>		
NOT USED	0	55231-26150	1	NOT USED	0	NOT USED	1	NOT USED	0	NOT USED	0	NOT USED	0	70000-10500	8	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

M8200HDC

Notes: FA case is 3.7 qts each side.

4wd Hyd Shuttle Shift w/cab

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="57.0"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text" value="5.3"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-40205	3	HH330-82630	2	70000-10500	6	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="3.7"/>		
TA043-71600	0	55231-26150	1	NOT USED	0	NOT USED	1	NOT USED	0	NOT USED	0	NOT USED	0	70000-10500	8	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8540DT

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540DT-1 <=80572

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540DT-1 >=80573

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540DTC

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8540DTC-1 <=80752

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8540DTC-1 >=80753

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8540F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540F-1 <=10464

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8540F-1 >=20001

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540FC

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8540FC-1 <=20008

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8540FC-1 >=20009

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8540HD

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540HD-1 <=80572

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540HD-1 >=80573

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540HD12

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8540HD12-1 <=80572

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540HD12-1 >=80573

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540HDC

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8540HDC12

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8540HDC12-1 <=80752

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8540HDC12-1 >=80753

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8540HDNB

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift Narrow

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8540HDNB-1

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift Narrow

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH3A0-82623 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8560HD

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED	0
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500	8
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M8560HD12

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED	0
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500	8
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M8560HDC

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift w/cab

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED	0
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
T1855-71600 1	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500	8
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

M8560HDC12

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift w/cab

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED	0
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
T1855-71600 1	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500	8
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M8560HF

Notes:

2wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8560HFC

Notes:

2wd Hyd Shuttle w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M8580DT

Notes: Front axle requires UDT. FA caes is 4.9 qts per side.

4wd Mech Shuttle Shift (also models w/ IC shuttle shift)

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15724-11080 1	<u>Engine Oil</u> <input type="text" value="17.2"/> 70000-10001 4	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="12.6"/> 70000-20000 13	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 33960-11230 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="4.9"/> 70000-20000 10
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M8580DT-C

Notes: Front axle requires UDT. FA caes is 4.9 qts per side.

4wd Mech Shuttle Shift (also models w/ IC shuttle shift)

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15724-11080 1	<u>Engine Oil</u> <input type="text" value="17.2"/> 70000-10001 4	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="52.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="12.6"/> 70000-20000 13	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> 36919-50310 2	<u>Inner Air</u> 33960-11230 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="4.9"/> 70000-20000 10
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9000 Notes:

2wd Mech Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="54.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9000-CAB Notes: FA case is 3.7 qts each side.

2wd Mech Shuttle Shift w/cab Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="54.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9000DT Notes:

2wd Mech Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="54.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9000DT-CAB Notes: FA case is 3.7 qts each side.

4wd Mech Shuttle Shift w/cab Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="54.9"/> 70000-20005 2	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-20001 4	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="3.7"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9000HD

Notes: FA case is 3.7 qts each side.

4wd Hyd Shuttle Shift

										Cooling System	9.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	57.0	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HH330-82630 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	3.7
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 1	NOT USED 0		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M9000HDC

Notes: FA case is 3.7 qts each side.

4wd Hyd Shuttle Shift w/cab

										Cooling System	9.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	57.0	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HH330-82630 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	3.7
TA043-71600 1	55231-26150 1	NOT USED 0		NOT USED 1	NOT USED 0		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M9540DT

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

										Cooling System	9.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HH330-82630 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 1	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M9540DT-1 <=81471

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

										Cooling System	9.5
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HH330-82630 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 1	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9540DT-1 >=81472

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9540DTC

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540DTC-1 <=81471

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540DTC-1 >=81472

Notes: 3.7 qts each FA gear case

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9540F										Notes:	
2wd Mech Shuttle Shift										Cooling System	
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<input type="text" value="11.3"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<input type="text" value="63.4"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<input type="text" value=""/>	<u>Steering Filter</u>	<input type="text" value="9.5"/>
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HH330-82630 2	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<input type="text" value=""/>	<u>F A Gear Case</u>	<input type="text" value=""/>
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 1	70000-40201 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M9540F-1 <=20008										Notes:	
2wd Mech Shuttle Shift										Cooling System	
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<input type="text" value="11.3"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<input type="text" value="63.4"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<input type="text" value=""/>	<u>Steering Filter</u>	<input type="text" value="9.5"/>
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HH330-82630 2	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<input type="text" value=""/>	<u>F A Gear Case</u>	<input type="text" value=""/>
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 1	70000-40201 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M9540F-1 >=20009										Notes:	
2wd Mech Shuttle Shift										Cooling System	
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<input type="text" value="11.3"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<input type="text" value="63.4"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<input type="text" value=""/>	<u>Steering Filter</u>	<input type="text" value="9.5"/>
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<input type="text" value=""/>	<u>F A Gear Case</u>	<input type="text" value=""/>
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 1	70000-40201 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M9540FC										Notes:	
2wd Mech Shuttle Shift w/cab										Cooling System	
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<input type="text" value="11.3"/>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<input type="text" value="63.4"/>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<input type="text" value=""/>	<u>Steering Filter</u>	<input type="text" value="9.5"/>
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HH330-82630 2	NOT USED 0		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<input type="text" value=""/>	<u>F A Gear Case</u>	<input type="text" value=""/>
TA043-71600 1	55231-26150 1	NOT USED 0		NOT USED 1	70000-40201 1		NOT USED 0	NOT USED 0		NOT USED 0	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9540FC-1 <=20008

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540FC-1 <=20008

Notes:

2wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540HD

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9540HD-1 <=81471

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9540HD-1 >=81472

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9540HD12

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9540HD12-1 <=81471

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9540HD12-1 >=81472

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9540HDC

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540HDC-1 <=81471

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540HDC-1 >=81472

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540HDC12

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9540HDC12-1 <=81471

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540HDC12-1 >=81472

Notes: 3.7 qts each FA gear case

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540HDC24-1

Notes: 3.7 qts each FA gear case

4wd 24 Sp Hyd Shuttle [6 Sp main, Mech Hi-Lo, Hyd Dual Sp]

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

M9540HDC-LTD

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.6"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9540HDL / HDL-1 <=81471
4wd Hyd Shuttle Shift Low Profile

Notes: 3.7 qts each FA gear case

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="63.4"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text" value="6.3"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-40205	3	HH330-82630	2	70000-10500	7	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="7.4"/>		
NOT USED	0	55231-26150	1	NOT USED	0	NOT USED	1	70000-40201	1	NOT USED	0	NOT USED	0	70000-10500	8	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

M9540HDL / HDL-1 >=81472
4wd Hyd Shuttle Shift Low Profile

Notes: 3.7 qts each FA gear case

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="63.4"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text" value="6.3"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-40205	3	HHTA0-37710	2	70000-10500	7	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="7.4"/>		
NOT USED	0	55231-26150	1	NOT USED	0	NOT USED	1	70000-40201	1	NOT USED	0	NOT USED	0	70000-10500	8	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

M9540HFL / HFL-1 <=20008
2wd Low Profile w/Hyd Shuttle Shift

Notes:

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="63.4"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-40205	3	HH330-82630	2	70000-10500	7	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="7.4"/>		
NOT USED	0	55231-26150	1	NOT USED	0	NOT USED	1	70000-40201	1	NOT USED	0	NOT USED	0	NOT USED	0	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

M9540HFL / HFL-1 >=20009
2wd Low Profile w/Hyd Shuttle Shift

Notes:

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="11.3"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="63.4"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text"/>		<u>Steering Filter</u>		Cooling System <input type="text" value="9.5"/>
HH1C0-32430	1	59700-26112	1	70000-10001	3	HH166-43560	1	70000-40205	3	HHTA0-37710	2	70000-10500	7	NOT USED	0	
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text" value="7.4"/>		
NOT USED	0	55231-26150	1	NOT USED	0	NOT USED	1	70000-40201	1	NOT USED	0	NOT USED	0	NOT USED	0	
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>														
NOT USED	0	NOT USED	0													

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9580DT

Notes: Front axle requires UDT. FA caes is 4.9 qts per side.

4wd Hyd Shuttle Shift (also models w/dual speed)

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15484-11210 1	<u>Engine Oil</u> <input type="text" value="17.2"/> 70000-10001 4	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-20005 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="12.6"/> 70000-20000 13	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15484-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 33740-27690 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="4.9"/> 70000-20000 10
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9580DT-C

Notes: Front axle requires UDT. FA caes is 4.9 qts per side.

4wd Hyd Shuttle Shift (also models w/dual speed)

Cooling System

<u>Engine Oil Filter</u> HH160-32430 1	<u>Outer Air</u> 15484-11210 1	<u>Engine Oil</u> <input type="text" value="17.2"/> 70000-10001 4	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="59.2"/> 70000-20005 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="12.6"/> 70000-20000 13	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 15484-11180 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> 33740-27690 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="4.9"/> 70000-20000 10
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M95SDS

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M95SDSC

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M95SDSC1

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/wide cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M95SDSCC

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M95SDSCC1

Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/wide cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M95SH

Notes:

4wd 16 Sp Hyd Shuttle, Swing Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M96SDS Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M96SDSC Notes: 3.7 qts each FA gear case

4wd 32 Sp Hyd Shuttle, Swing Shift and Dual Speed w/cab Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text" value="7.4"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M96SH Notes:

4wd 16 Sp Hyd Shuttle, Swing Shift Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HH330-82630 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 1	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9960HD Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9960HD12

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
NOT USED 0	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

M9960HDC

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift w/cab

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
T1855-71600 1	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

M9960HDC12

Notes: 3.7 ats each FA gear case.

4wd Hyd Shuttle Shift w/cab

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
T1855-71600 1	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

M9960HDC24

Notes: 3.7 qts each FA gear case.

4wd Hyd Shuttle Shift w/cab

										Cooling System	10.6
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	11.3	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	63.4	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	6.3	<u>Steering Filter</u>	
HH1C0-32430 1	59700-26112 1	70000-10001 3		HH166-43560 1	70000-40205 3		HHTA0-37710 2	70000-10500 7		NOT USED 0	
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>		<u>Fuel Secondary</u>	<u>Trans Oil 2</u>		<u>Transmission Filter</u>	<u>F A Bevel Case</u>		<u>F A Gear Case</u>	7.4
T1855-71600 1	55231-26150 1	NOT USED 0		NOT USED 0	70000-40201 1		NOT USED 0	NOT USED 0		70000-10500 8	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
6A671-75090 2	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

M9960HDL/HDSL

Notes: 3 qts each FA gear case.

4wd Hyd Shuttle Shift Low Profile

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text" value="6.3"/> 70000-10500 7	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="7.4"/> 70000-10500 8
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9960HF

Notes:

2wd Hyd Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

M9960HFC

Notes:

2wd Hyd Shuttle w/cab

Cooling System

<u>Engine Oil Filter</u> HH1C0-32430 1	<u>Outer Air</u> 59700-26112 1	<u>Engine Oil</u> <input type="text" value="11.3"/> 70000-10001 3	<u>Fuel Primary</u> HH166-43560 1	<u>Trans Oil 1</u> <input type="text" value="63.4"/> 70000-40205 3	<u>Hydraulic Filter</u> HHTA0-37710 2	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> T1855-71600 1	<u>Inner Air</u> 55231-26150 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> 6A671-75090 2	<u>CVT Air Filter</u> NOT USED 0						

MX4700DT

Notes:

4wd Mech Shuttle Shift w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-40200 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

MX4700F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

MX4700HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

MX5000DT

Notes:

4wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="7.9"/> 70000-10500 8	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

MX5000F

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

MX5000SU

Notes:

2wd Manual Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.0"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40202 1	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

MX5100DT

Notes:

4wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-40200 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

MX5100F

Notes:

2wd Mech Shuttle Shift

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

MX5100HST

Notes:

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> R1401-42270 1	<u>Engine Oil</u> <input type="text" value="8.5"/> 70000-10001 2	<u>Fuel Primary</u> 15521-43160 1	<u>Trans Oil 1</u> <input type="text" value="46.4"/> 70000-40205 2	<u>Hydraulic Filter</u> HHTA0-37710 1	<u>F A Diff (center)</u> <input type="text" value="8.9"/> 70000-10500 9	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> R2401-42280 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 2	<u>Transmission Filter</u> HHTA0-59900 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

RTV1100 <=BKZ999 (ENG S/N)

Notes: Also uses K7711-88380 cab air filter (under inst. Panel) Each FA gear case is .16 qts.

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH164-32430 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10000 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40202 1	<u>Hydraulic Filter</u> HHK71-14080 2	<u>F A Diff (center)</u> <input type="text" value=".6"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".32"/> 70000-40200 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

RTV1100 >=BL0001 (ENG S/N)

Notes: Also uses K7711-88380 cab air filter (under inst. Panel). Each FA gear case is .16 qts.

4wd Hydro Trans w/cab

Cooling System

<u>Engine Oil Filter</u> HH160-32093 1	<u>Outer Air</u> TA040-93230 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40202 1	<u>Hydraulic Filter</u> HHK71-14080 2	<u>F A Diff (center)</u> <input type="text" value=".6"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> TA043-71600 1	<u>Inner Air</u> TA040-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40201 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".32"/> 70000-40200 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

RTV1140

Notes: Each FA gear case is .16 qts. Hydraulic Oil tank capacity is 15.3 qts of Super UDT.

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> TC020-16320 1	<u>Engine Oil</u> <input type="text" value="4.3"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 0	<u>Trans Oil 1</u> <input type="text" value="11.6"/> 70000-40201 3	<u>Hydraulic Filter</u> HHK71-14080 1	<u>F A Diff (center)</u> <input type="text" value=".6"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> T0270-93220 1	<u>Engine Oil 2</u> 70000-10000 1	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=".32"/> 70000-40100 1
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

RTV400ci

Notes: Brake fluid is DOT3.

4wd CVT Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K7211-82130 1	<u>Engine Oil</u> <input type="text" value="1.7"/> 70000-10200 2	<u>Fuel Primary</u> NOT USED 0	<u>Trans Oil 1</u> <input type="text" value="5.6"/> 70000-40201 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value=".22"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> 6C060-99410 1						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

RTV500 <=19024

Notes: Brake fluid is DOT3

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="1.43"/> 70000-10000 2	<u>Fuel Primary</u> NOT USED 0	<u>Trans Oil 1</u> <input type="text" value="8.8"/> 70000-40201 2	<u>Hydraulic Filter</u> HHK71-14080 1	<u>F A Diff (center)</u> <input type="text" value=".22"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> K7561-82360 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

RTV500 >=19025

Notes: Brake fluid is DOT3

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="1.43"/> 70000-10200 2	<u>Fuel Primary</u> NOT USED 0	<u>Trans Oil 1</u> <input type="text" value="8.8"/> 70000-40201 2	<u>Hydraulic Filter</u> HHK71-14080 1	<u>F A Diff (center)</u> <input type="text" value=".22"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

RTV900

Notes: Hyd filter is actually 2nd trans filter. Each FA knuckle case is .10 qts.
No hyd filter is used on any model.

4wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="10.4"/> 70000-40202 1	<u>Hydraulic Filter</u> HHK71-14080 1	<u>F A Diff (center)</u> <input type="text" value=".63"/> 70000-40200 1	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> K7561-82360 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value=".10"/> 70000-40200 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1460

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> 12499-32430 1	<u>Outer Air</u> 12498-11220 1	<u>Engine Oil</u> <input type="text" value="1.4"/> 70000-10200 2	<u>Fuel Primary</u> 70000-73275 1	<u>Trans Oil 1</u> <input type="text" value="2.4"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 12498-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

T1560 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> 12499-32430 1	<u>Outer Air</u> 12498-11220 1	<u>Engine Oil</u> <input type="text" value="1.4"/> 70000-10200 2	<u>Fuel Primary</u> 70000-73275 1	<u>Trans Oil 1</u> <input type="text" value="2.4"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 12498-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1570 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7194-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7187-82150 1	<u>Trans Oil 1</u> <input type="text" value="2.4"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7194-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1570A Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7194-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7187-82150 1	<u>Trans Oil 1</u> <input type="text" value="2.4"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7194-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1600H Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 15852-11082 1	<u>Engine Oil</u> <input type="text" value="2.2"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="1.8"/> 70000-10200 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

T1670 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7194-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7187-82150 1	<u>Trans Oil 1</u> <input type="text" value="3.8"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7194-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1670A Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7194-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7187-82150 1	<u>Trans Oil 1</u> <input type="text" value="3.8"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7194-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1770 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> 12499-32430 1	<u>Outer Air</u> E7195-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7195-41120 1	<u>Trans Oil 1</u> <input type="text" value="3.8"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7195-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1770A Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7194-32112 0	<u>Outer Air</u> E7189-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7189-43120 1	<u>Trans Oil 1</u> <input type="text" value="3.8"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7189-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

T1870 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> 12499-32430 1	<u>Outer Air</u> E7195-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7195-41120 1	<u>Trans Oil 1</u> <input type="text" value="3.8"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7195-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1870A Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7189-11220 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7189-43120 1	<u>Trans Oil 1</u> <input type="text" value="3.8"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7189-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T1880-42 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7188-32110 1	<u>Outer Air</u> E7187-10040 1	<u>Engine Oil</u> <input type="text" value="1.6"/> 70000-10200 2	<u>Fuel Primary</u> E7187-82150 1	<u>Trans Oil 1</u> <input type="text" value="2.9"/> SAE 20W-50 3	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1042-81080 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

T2080-42 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7188-32110 1	<u>Outer Air</u> E7185-10100 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="2.9"/> SAE 20W-50 3	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7185-10070 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1042-81080 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

T2380-48

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> E7188-32110 1	<u>Outer Air</u> E7185-10100 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="2.9"/> SAE 20W-50 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7185-10070 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1042-81080 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

TG1860 (Diesel)

Notes: Trans- 3.6 qts 20W50 engine oil. Gearbox- .66 qts 80W90.

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.2"/> 70000-10000 4	<u>Fuel Primary</u> 12581-43012 0	<u>Trans Oil 1</u> <input type="text"/> NOT USED 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

TG1860G (Gas)

Notes: Trans- 3.6 qts 20W50 engine oil.

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> 12499-32430 1	<u>Outer Air</u> LE601-11220 1	<u>Engine Oil</u> <input type="text" value="1.8"/> 70000-10200 2	<u>Fuel Primary</u> 70000-73275 1	<u>Trans Oil 1</u> <input type="text"/> NOT USED 0	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> LE601-11210 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> NOT USED 0	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZD18 (F)

Notes: Each rear axle case holds 1.9 qts.

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> K1211-82320 1	<u>Engine Oil</u> <input type="text" value="3.4"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="4.2"/> 70000-40201 1	<u>Hydraulic Filter</u> 66021-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK20-36990 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="1.9"/> 70000-10500 4
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZD21 (F) Notes: Each rear axle case holds 1.9 qts.

										Cooling System	2.7
2wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>				
HH150-32430 1	K1211-82320 1	70000-10001 1 3.7	12581-43012 1	70000-40201 1 4.2	66021-36390 1	NOT USED 0	NOT USED 0				
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>				
NOT USED 0	NOT USED 0	NOT USED 0	12581-43012 1	70000-40200 1	HHK20-36990 1	NOT USED 0	70000-10500 4 1.9				
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

ZD221-48 Notes: Hydraulic filter is screen type.

										Cooling System	2.2
2wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>				
HH150-32430 1	K1211-82320 1	70000-10001 1 3.7	12581-43012 1	70000-40201 2 7.9	K3111-36390 1	NOT USED 0	NOT USED 0				
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>				
NOT USED 0	K7561-82632 1	NOT USED 0	12581-43012 1	NOT USED 0	HHK70-14070 1	NOT USED 0	NOT USED 0 1.9				
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

ZD221-54 Notes: Hydraulic filter is screen type.

										Cooling System	2.2
2wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>				
HH150-32430 1	K1211-82320 1	70000-10001 1 3.7	12581-43012 1	70000-40201 2 7.9	K3111-36390 1	NOT USED 0	NOT USED 0				
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>				
NOT USED 0	K7561-82632 1	NOT USED 0	12581-43012 1	NOT USED 0	HHK70-14070 1	NOT USED 0	NOT USED 0 1.9				
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

ZD25F Notes:

										Cooling System	4.23
2wd Hydro Trans											
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>				
HH150-32094 1	K1211-82320 1	70000-10001 1 3.6	12581-43012 1	70000-40201 1 4.2	K3111-36390 1	NOT USED 0	NOT USED 0				
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>				
NOT USED 0	NOT USED 0	NOT USED 0	12581-43012 1	70000-40200 1	HHK20-36990 1	NOT USED 0	NOT USED 0 1.9				
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>										
NOT USED 0	NOT USED 0										

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZD28 (F) Notes: Each rear axle case holds 1.9 qts.

								Cooling System	4.23
2wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32094 1	K1211-82320 1	70000-10001 1 3.6	12581-43012 1	70000-40201 1 4.2	66021-36390 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	NOT USED 0	NOT USED 0	12581-43012 1	70000-40200 1	HHK20-36990 1	NOT USED 0	70000-10500 4	1.9	
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

ZD321-60 Notes:

								Cooling System	2.85
2wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32430 1	K1211-82320 1	70000-10001 1 3.7	12581-43012 1	70000-40201 3 12.8	HH3A0-82630 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	K7561-82632 1	NOT USED 0	12581-43012 1	70000-40200 1	HHK70-14070 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

ZD321N-54 Notes:

								Cooling System	2.85
2wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32430 1	K1211-82320 1	70000-10001 1 3.7	12581-43012 1	70000-40201 3 12.8	HH3A0-82630 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	K7561-82632 1	NOT USED 0	12581-43012 1	70000-40200 1	HHK70-14070 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

ZD323 Notes:

								Cooling System	2.85
2wd Hydro Trans									
<u>Engine Oil Filter</u>	<u>Outer Air</u>	<u>Engine Oil</u>	<u>Fuel Primary</u>	<u>Trans Oil 1</u>	<u>Hydraulic Filter</u>	<u>F A Diff (center)</u>	<u>Steering Filter</u>		
HH150-32430 1	K3181-82240 1	70000-10001 1 3.7	12581-43012 1	70000-40201 3 12.8	HH3A0-82630 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Outside)</u>	<u>Inner Air</u>	<u>Engine Oil 2</u>	<u>Fuel Secondary</u>	<u>Trans Oil 2</u>	<u>Transmission Filter</u>	<u>F A Bevel Case</u>	<u>F A Gear Case</u>		
NOT USED 0	K3181-82250 1	NOT USED 0	12581-43012 1	70000-40200 1	HHK70-14070 1	NOT USED 0	NOT USED 0		
<u>Cab Filter (Recirc)</u>	<u>CVT Air Filter</u>								
NOT USED 0	NOT USED 0								

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZD326P-60

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K3181-82240 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> K3181-82250 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZD326S-60

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K3181-82240 1	<u>Engine Oil</u> <input type="text" value="4.1"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> K3181-82250 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZD331LP-72

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K3181-82240 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> K3181-82250 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZD331P-60

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> K3181-82240 1	<u>Engine Oil</u> <input type="text" value="6.0"/> 70000-10001 1	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> K3181-82250 1	<u>Engine Oil 2</u> 70000-10000 2	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZG123S Notes: Trans oil is 20W50 engine oil.

2wd Hydro Trans Cooling System

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7176-00400 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="5.1"/> 70000-73820 6	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7176-00430 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1042-81080 2	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG124E Notes: Trans oil is 20W50 engine oil.

2wd Hydro Trans Cooling System

<u>Engine Oil Filter</u> E7181-01250 1	<u>Outer Air</u> E7181-01130 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10200 2	<u>Fuel Primary</u> E7181-00790 1	<u>Trans Oil 1</u> <input type="text" value="5.1"/> 70000-73820 6	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7181-01090 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1042-81080 2	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG127E Notes: Trans oil is 20W50 engine oil.

2wd Hydro Trans Cooling System

<u>Engine Oil Filter</u> E7181-01250 1	<u>Outer Air</u> E7178-00160 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10200 2	<u>Fuel Primary</u> E7181-00790 1	<u>Trans Oil 1</u> <input type="text" value="5.1"/> 70000-73820 6	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1042-81080 2	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG127S Notes: Trans oil is 20W50 engine oil.

2wd Hydro Trans Cooling System

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7176-00400 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="5.1"/> 70000-73820 6	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> E7176-00430 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> K1042-81080 2	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZG20 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7192-11210 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG222 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10000 2	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 2	<u>Hydraulic Filter</u> K3111-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG222A Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="1.9"/> 70000-10200 2	<u>Fuel Primary</u> K3272-24210 1	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 4	<u>Hydraulic Filter</u> K3111-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 70000-73275 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG227-54 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 2	<u>Hydraulic Filter</u> K3111-36390 1	<u>F A Diff (center)</u> <input type="text"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text"/> NOT USED 0	<u>F A Gear Case</u> <input type="text"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZG227A-54

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10200 3	<u>Fuel Primary</u> K3272-24210 1	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 2	<u>Hydraulic Filter</u> K3111-36390 1	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 70000-73275 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG227L-60

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10200 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 2	<u>Hydraulic Filter</u> K3111-36390 1	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG227LA-60

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> 6C060-99410 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10200 3	<u>Fuel Primary</u> K3272-24210 0	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 2	<u>Hydraulic Filter</u> K3111-36390 1	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> 32721-58242 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 70000-73275 1	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG23

Notes:

2wd Hydro Trans

Cooling System

<u>Engine Oil Filter</u> E7194-32112 1	<u>Outer Air</u> E7192-11210 1	<u>Engine Oil</u> <input type="text" value="2.0"/> 70000-10200 2	<u>Fuel Primary</u> E7192-43120 1	<u>Trans Oil 1</u> <input type="text" value="7.9"/> 70000-40201 2	<u>Hydraulic Filter</u> NOT USED 0	<u>F A Diff (center)</u> <input type="text" value="0"/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> NOT USED 0	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> NOT USED 0	<u>Transmission Filter</u> HH660-36060 1	<u>F A Bevel Case</u> <input type="text" value="0"/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value="0"/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZG327 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> TC020-16320 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10000 3	<u>Fuel Primary</u> 12581-43012 1	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> T0270-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> NOT USED 0	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG327A Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32094 1	<u>Outer Air</u> TC020-16320 1	<u>Engine Oil</u> <input type="text" value="2.1"/> 70000-10200 3	<u>Fuel Primary</u> K3272-24210 2	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> T0270-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 70000-73275 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG332LP-72 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> TC020-16320 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10200 4	<u>Fuel Primary</u> K3272-24210 2	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> T0270-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

ZG332P-60 Notes: Cooling System

2wd Hydro Trans

<u>Engine Oil Filter</u> HH150-32430 1	<u>Outer Air</u> TC020-16320 1	<u>Engine Oil</u> <input type="text" value="3.7"/> 70000-10200 4	<u>Fuel Primary</u> K3272-24210 2	<u>Trans Oil 1</u> <input type="text" value="12.8"/> 70000-40201 3	<u>Hydraulic Filter</u> HH3A0-82630 1	<u>F A Diff (center)</u> <input type="text" value=""/> NOT USED 0	<u>Steering Filter</u> NOT USED 0
<u>Cab Filter (Outside)</u> NOT USED 0	<u>Inner Air</u> T0270-93220 1	<u>Engine Oil 2</u> NOT USED 0	<u>Fuel Secondary</u> 12581-43012 1	<u>Trans Oil 2</u> 70000-40200 1	<u>Transmission Filter</u> HHK70-14070 1	<u>F A Bevel Case</u> <input type="text" value=""/> NOT USED 0	<u>F A Gear Case</u> <input type="text" value=""/> NOT USED 0
<u>Cab Filter (Recirc)</u> NOT USED 0	<u>CVT Air Filter</u> NOT USED 0						

NOTICE: This is an evaluation version. No guarantee of accuracy of information is inferred. You are responsible to sell the correct parts! Please report errors to dbowman@kubota.com.

Fluid fill capacities are shown inside the boxes in quarts. Quantity required for each part is shown to the right of the part #.

ZP330P-60

Notes:

2wd Hydro Trans

<u>Engine Oil Filter</u>		<u>Outer Air</u>		<u>Engine Oil</u> <input type="text" value="3.7"/>		<u>Fuel Primary</u>		<u>Trans Oil 1</u> <input type="text" value="12.8"/>		<u>Hydraulic Filter</u>		<u>F A Diff (center)</u> <input type="text"/>		<u>Cooling System</u> <input type="text" value="2.85"/>	
HH150-32430	1	TC020-16320	1	70000-10200	4	NOT USED	0	70000-40201	3	HH3A0-82630	1	NOT USED	0	NOT USED	0
<u>Cab Filter (Outside)</u>		<u>Inner Air</u>		<u>Engine Oil 2</u>		<u>Fuel Secondary</u>		<u>Trans Oil 2</u>		<u>Transmission Filter</u>		<u>F A Bevel Case</u> <input type="text"/>		<u>F A Gear Case</u> <input type="text"/>	
NOT USED	0	T0270-93220	1	NOT USED	0	NOT USED	0	70000-40200	1	HHK70-14070	1	NOT USED	0	NOT USED	0
<u>Cab Filter (Recirc)</u>		<u>CVT Air Filter</u>													
NOT USED	0	NOT USED	0												